

Maintaining & Installation



XINGYUE CARPET INDUSTRY

GUSHAN INDUSTRY ZONE

YONGKANG,ZHEJIANG,CHINA

TEL : +86 21 6487 2386

FAX : +86 21 6487 0723

<http://www.xingyuecarpet.com/>

<http://www.xingyue.com/>

MAINTAINING & INSTALLATION INSTRUCTION

1,Preparation and Inspection


A. Floor check

- 1.Make sure the surface is flat.
- 2.Get rid of paint, oil, wax and oil substances. Also cover all the cracks.
- 3.Calculate the surface of installation while considering walls and extra losses.

B. Preparation of installation

- 1.confirm the numbers of products that have been brought into the installation site while organize them into lot and color. Then, distribute correct amount to each site.
- 2.Prepare the rolled ruler, adhesive, cutter and triangle ruler.
- 3.Organize workers into correspondent sites while considering due dates, kinds of operation and covering area.





Maintaining & Installation

2. Condition of site

1. carpet must stock in the place where temperature is above 10 C° and requires to be at same or higher temperature during operation.

2. Appropriate lightning requires at site for its proper operation management.

3. Adhesive and carpet must be stock at the site for seasoning naturalization, at least one day.

4. In case of installation over the concrete to get rid of bonding problem due to alkali substances, it is ideal to maintain the PH between 5 to 9 and requires maintain at least 90 to 120 days of curing time.

5. In case of heating system locates under floor, such as heating pipe, it is ideal to lower the temperature to increase bonding rate and especially, needs care is required when installing by stretch-in method.



Maintaining & Installation

3.Tile Carpet Installation Method

1.Drawing center axis	2.Applications of adhesive
<p>1.Minimize the numbers of tile to install and divide the floor into four sections to use the more than half of the each corner.</p> <p>2.Mark the both horizontal and vertical line with rope or chalk.</p> <p>3.Center axis must form 90 degree by perpendicular to each other.</p>	<p>1.Apply the adhesive by considering installation speed after chose order of glue application on each four sections.</p> <p>2.Application must be use proper tool which designed for installation of carpet tile.</p> <p>3.Begin to install at the time when its color turn into clear.(open time 10~15 min)</p>
3.Carpet Installation	4.Finishing Operation
<p>1.Install the carpet when adhesive becomes clear and make sure to operate in pyramid method, starting from the carpet, by checking the arrow on back of the carpet.</p> <p>2.Center line becomes the center of the whole installation, which requires checking during operation frequently to remain as perpendicular.</p>	<p>1.While install tile that attached to be the wall, cut the tile about 1mm short to install easily and tightly to the wall.</p> <p>2.After checking the install direction, cut from the back.</p>



Maintaining & Installation

4. Inspection after the installation

1. Professional installer or inspector must inspect site to find problems after the installation and needs to re-install or repair if there are problems.
2. Take careful look on the directions of the pile, attached parts, pollution, curl and color differences.
3. In case of moving heavy objects within 24 hours of period from installation leads to recommendation of using protector, or cover on the top of carpet to protect carpet.
4. Place protector on the top of carpet to avoid any damages from operation on walls or ceiling.

